



Whats in the box – all the parts for ONE set. For the dual unit you get 2 of these.



On our 20.63.1 the mounting plates are already part of the chassis. These are set up for the Reich movers that Jayco offer (however they don't offer movers for OB vans as they are aware of the issues with tandem wheel OB units using movers). They also work perfectly for the Purple Line units.





On the rear wheels you will have to remove the mudflaps and cut a few inches off as the drive will get in the way of the mudflap.




Bolt the mounting plates on to the chassis bracket



You will need to prop up the movers so that they are at the right height on both sides before bolting them on.





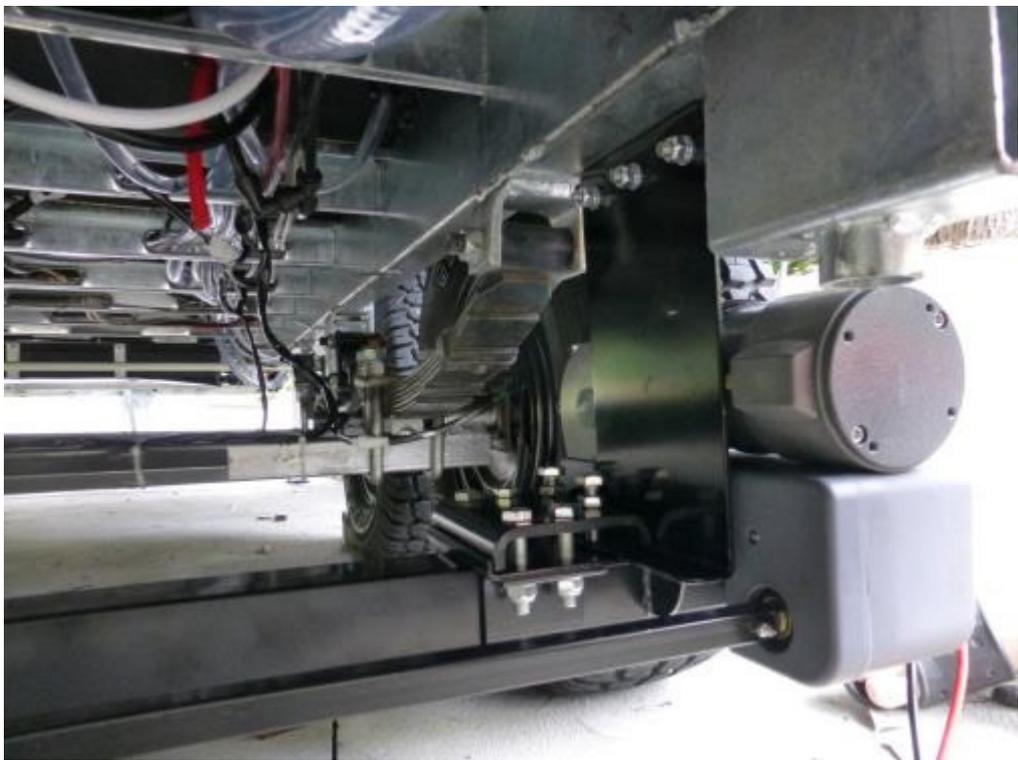



This setup gets the movers to exactly the right height - so that the drive wheel is centred on the wheel.











The electronics takes the longest to get right. For two sets of movers you do need two batteries as the current draw is just a bit too high for one battery. I mounted mine in the front tunnel but take care as Jayco run cables behind the plastic liner. These are meant to be positioned at floor level but I found out the hard way (with a screw through a wire) that if they have too much cable they just loop it behind the plastic. I put the isolating switch in a PVC bod and mounted it near these receiver units.
